# **EPSON**

21 Mar. 2012

#### **Technical Information SP12-001**

## ■ Coverage

This document applies to the S1V30120 device.

## Overview

The S1V30120 outputs no sound(in silence) when [:mode math on]<.

## Detailed explanation

1. Phenomenon

At "FONIX DECtalk 5.01-E1 User Guide Math mode example" is written as followings.

Symbol	Name	Pronunciation	Pronunciation
		[:mode math on]	[:mode math off]
<	less than	"less than"	"left angle bracket"

In actual test case, no sound output from S1V30120.

Symbol	Name	Pronunciation	Pronunciation
		[:mode math on]	[:mode math off]
<	less than	No sound	No sound

For example.

[:mode math on]< - No sound. [:mode math off]< - No sound.

#### 2. Work-around

Use DECtalk in-line command, [:phoneme] to send the text stream from host CPU, as shown below.

[:phoneme arpabet speak on] [II ` eh s dh ` ae- n]

#### NOTICE:

No part of this material may be reproduced or duplicated in any form or by any means without the written permission of Seiko Epson. Seiko Epson reserves the right to make changes to this material without notice. Seiko Epson does not assume any liability of any kind arising out of any inaccuracies contained in this material or due to its application or use in any product or circuit and, further, there is no representation that this material is applicable to products requiring high level reliability, such as, medical products. Moreover, no license to any intellectual property rights is granted by implication or otherwise, and there is no representation or warranty that anything made in accordance with this material will be free from any patent or copyright infringement of a third party. This material or portions thereof may contain technology or the subject relating to strategic products under the control of the Foreign Exchange and Foreign Trade Law of Japan and may require an export license from the Ministry of Economy, Trade and Industry or other approval from another government agency.